

大切に保管してください

N8115-05 EXPRESSBUILDER 組込みキット 取扱説明書

組み立てを行う前に

この度は、本製品をお買い上げいただきまして誠にありがとうございます。

本製品を使用して本体装置を安全にお使いいただくために、ここで説明する注意事項を必ず読み、ご理解・ご確認し、安全にご活用ください。

また、本製品を本体装置に取り付ける際には、装置に添付のユーザーズガイド等に記載されている注意事項も必ず読み、ご理解・ご確認の上、作業を行ってください。ユーザーズガイドは本体装置に添付の EXPRESSBUILDER DVD-ROM に格納されています。

なお、本書は大切に保管してください。



安全について



注意

注意事項を無視して本製品を取り扱うと、本体装置の故障、人体事故、火災、周辺機器の損傷を引き起こす原因となることがあります。



本製品を本体装置へ取り付け、取り外しの際は必ず電源プラグをコンセントから抜き、外部装置と接続しているケーブルを外してください。故障や感電する恐れがあります。



本体装置内部に手をいれるときには、指をはさんだり、ぶついたりしないように注意してください。



ネジは本体装置内部へ落とさない様、十分ご注意ください。
故障や感電の原因となります。



本製品を梱包箱から取り出した後は、ほこりの多い場所や水などの液体のかかる恐れのある場所に置かないでください。



本製品を梱包箱から取り出した後は、強い磁気を発生させる物の近くに置かないでください。



本製品の端子部分を素手で触ったり、本製品を直接机の上に置いたりしないでください。故障の原因となります。



本製品の取り付け、取り外しを行う前に、身近な金属(アルミサッシやドアのノブなど)に手を触れて、身体の静電気を取り除くようにしてください。

本製品を本体装置に増設する際には、最寄りの保守サービス会社に依頼することをお勧めします。


まえがき

本製品は、Express5800/GT110d, GT110d-S および E110d-1, R110d-1E 専用のUSBフラッシュメモリです。本製品を取り付けることにより、本体装置の EXPRESSBUILDER (ドキュメントと一部のソフトウェアを除く) を格納することができます。


構成品

梱包箱には、次の物が入っています。ご確認ください。

項番	品名	数量	備考
1	内蔵USBフラッシュメモリ	1	
2	絶縁カバー	1	Express5800/E110d-1, R110d-1E のみに適用
3	ネジセット	1	ネジセット1式に、USBフラッシュメモリをボードへ取り付けるためのネジが1個含まれています。
4	保証書	1	
5	取扱説明書	1	本書

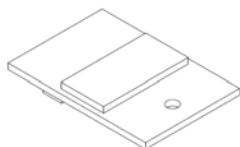


内蔵USBフラッシュメモリ x1

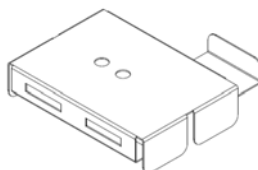


絶縁カバー x1



ネジセット x1




保証書 x1



取扱説明書 x1

取り付け方法

本製品を本体装置へ取り付ける際は、必ず装置に添付のユーザーズガイドに従い正しく取り付けてください。なお、その際、本製品の構成品は以下の順番で取り付けられます。

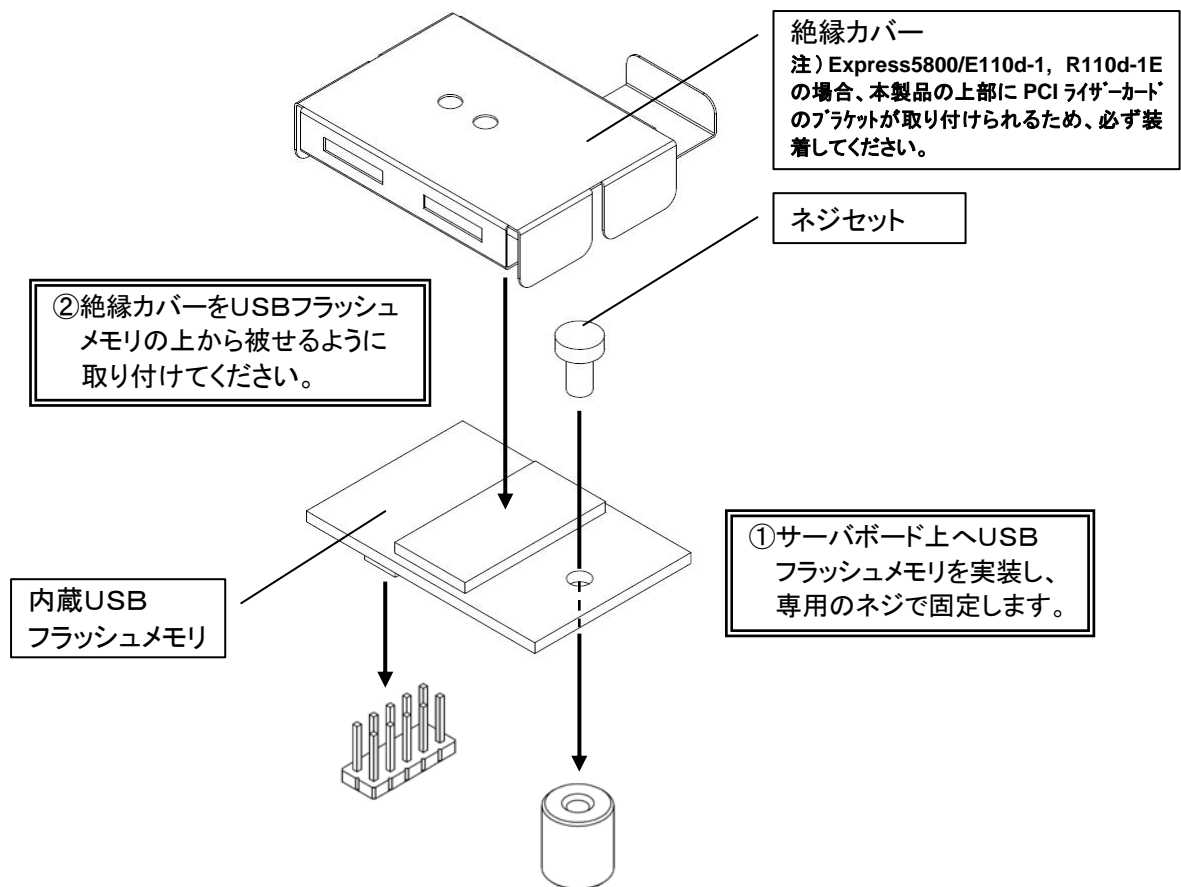

Please store this document in case of future usage.

N8115-05 Internal Flash Memory Assembling and Handling Guide

Before Installation















Thank you for purchasing this option product.

In order to ensure a safe upgrade of your server, please read this document carefully.

To install this option product to your server, read, understand and confirm the instruction (including CAUTION) in the User's Guide of the server prior to installation. User's Guide is included in EXPRESSBUIDER DVD-ROM.

Please store this document in case of future usage.

Safety Information

 CAUTION	
	Make sure to refer to the User's Guide provided with your server when mounting any optional device/board/peripheral into your server.
 	Prior to installing or removing an option, make sure to unplug all system AC power cords from their electrical outlets. Remove all cables connecting the system with external devices. Failure to disconnect the power cords before opening the system can result in personal injury and equipment damage.
	Note sufficiently that your fingers may not be caught or cut by a mechanical part at inside of server.
	Make sure not to drop screws or any conductive parts in the server. Failure to do causes the server to malfunction or an electric shock.
	After taking out the DIMM boards from their packaging, try to keep them away from dust and liquids in order to avoid accidental damage.
 	After taking out the DIMM boards from their packaging, do not place them near a device that is generating intense magnetic fields
	If an error message is displayed on the display after completing the upgrade installation, refer to the Error Message List in the User's Guide provided with your server.
	Make sure to install the two DIMM boards as a single bank. For detailed descriptions of the bank scheme, refer to the User's Guide provided with your server.
	Touch any metal surface nearby (window frame or doorknob) to discharge the static electricity from your body before mounting any optional device/board/peripheral.
 	Do not touch the connector on the DIMM board with your bare hands nor place the board directly on top of a desk without adequate anti-static precautions. Failure to do so can result in equipment damage.

Introduction


The N8115-05 Internal Flash Memory is designed exclusively for NEC Express5800/GT110d or GT110d-S and NEC Express5800/E110d-1 or R110dd-1E.

Checking components


The following table lists components included within the module.

When there are lack article, damaging and so on, contact your service representative.

No.	Product Name	Qty.	Note
1	Internal Flash Memory	1	
2	Insulation Cover	1	For Express5800/E110d-1 and R110d-1E only.
3	Screw set	4	One screw for Flash Memory are included in a Screw set.
4	Assembling and Handling Guide	1	This document

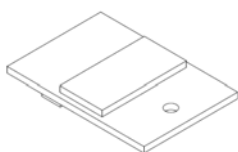


Internal Flash Memory x1

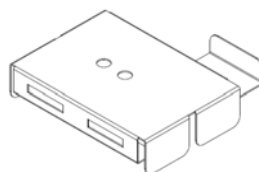

Insulation Cover x1



Screw set x1

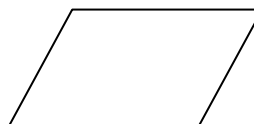

Assembling and Handling Guide x1

How to install the Internal Flash Memory

In case you install this product into your server, refer to the User's Guide provided with your server.
And also refer to the following order.

